
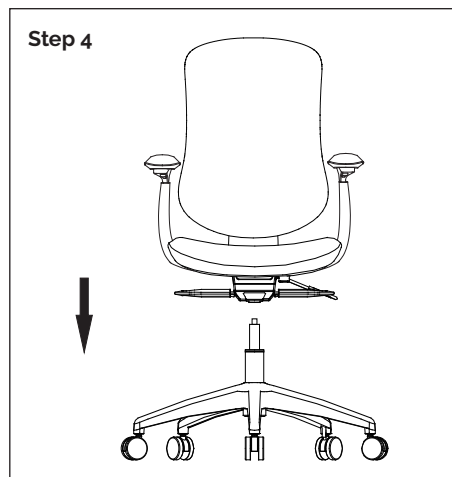
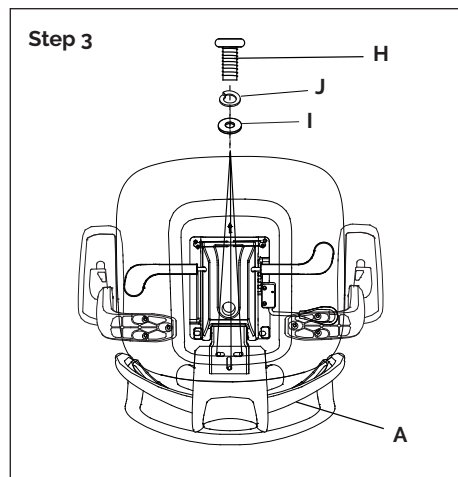
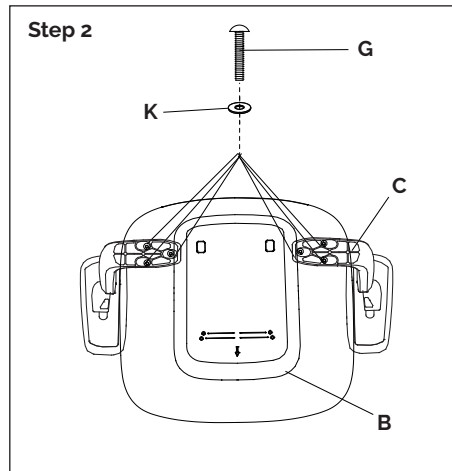


# Assembly, Operating & Maintenance Instructions

**Attention:** Please remove all items from the carton, and verify all pieces before assembly.

## BURO Quantum Upholstered Chair

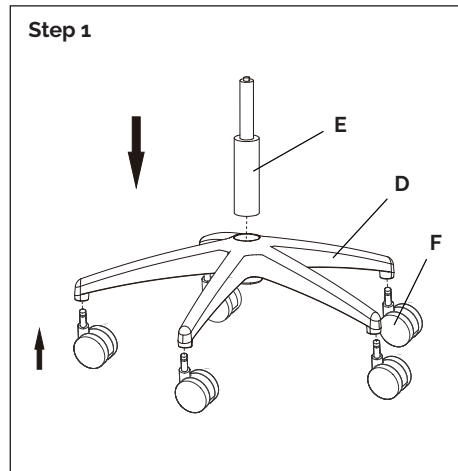

### Parts List

| KEY | QTY | DESCRIPTION                  |
|-----|-----|------------------------------|
| A   | 1   | Back                         |
| B   | 1   | Seat                         |
| C   | 2   | Armrests                     |
| D   | 1   | 5 Star Base                  |
| E   | 1   | Gas lift                     |
| F   | 5   | Castors                      |
| G   | 6   | Armrest Screws (M6*35mm)     |
| H   | 3   | Backrest Screws (M8*20mm)    |
| I   | 3   | Backrest Washers (M8*14*2mm) |
| J   | 3   | Spring Washers (M8*ø17)      |
| K   | 6   | Armrest Washers (M6*ø14)     |
| L   | 1   | Allen Key (M6)               |

### Care & Maintenance

#### GENERAL CARE

- To maintain the appearance of non-upholstered parts wipe the surface with a clean cloth dampened with a mild detergent solution.
- Do not remove any parts for separate cleaning.
- Do not saturate the fabric or interior with water or other cleaning liquids.
- Do not shampoo clean.
- Do not clean with hot water extraction machine.
- Do not clean with onsite drycleaning machine.
- Protect from direct sunlight, heat and weather.

#### FABRIC UPHOLSTERY CARE

- Wipe with a clean cloth dampened with a mild upholstery detergent solution.
- A soft bristle brush may be used to remove ingrained soil.
- Spot clean as above.
- Treat spills and stains as soon as possible.
- Persistent stains may require treatment by a professional cleaner.
- May be cleaned with dry powder cleaners.
- Allow to dry thoroughly before reuse.

### Upholstery & Foam Specs\*

#### FOAM

Flame Resistant: Ca117 Section A Part I & Section D Part II

#### UPHOLSTERY: FABRIC

Flame Resistance: Ca117 Section E Class I

\*This applies only to standard Buro Seating stock. Any customer specified upholstery may not meet these specifications.

### Preventative Maintenance & Warning!

- Use this product only for seating one person at a time.
- Do not use this chair as a step stool/ladder.
- Do not sit on any part of the chair except the seat.
- Do not use this chair on uneven floor surfaces.
- Do not interfere with the operating of the gas lift.
- Do not use chair unless all bolts, screws and knobs are tight.
- At least every six months check all bolts, screws and knobs to ensure they are tight.
- If any parts are missing, broken, damaged or worn do not use the product until repairs are made using factory authorised parts.
- Dispose of packaging properly.
- Plastic bag is not a toy.
- Do not use plastic bag as a head covering as it may cause suffocation.
- Failure to follow these warnings could result in serious injury.